

Ibiza Slate Shower Tray Installation Manual

**THIS PRODUCT MUST BE INSTALLED
BY A QUALIFIED PLUMBER**



IMPORTANT - STORE TRAY ON FLAT

PRIOR TO INSTALLATION

Prior to installation, the shower tray must be checked thoroughly for defects. In the unlikely event that the product has a defect, it must not be installed and should be returned to the supplier who will provide a replacement, if necessary.

Checks should include, but not limited to, the following:

- Ensure that the colour and finish of the shower tray is acceptable
- Ensure that the product is not cracked or chipped.
- Ensure that there is no twisting or distortions of the product.
- Ensure that the shower tray suitably drains water when levelled.
- Ensure that the shower tray is the correct size by checking lengths with a measuring tape.

The manufacturer will not be held responsible for the costs of removal or replacement of a shower tray or any other costs incurred as a result of the shower tray having a defect if said defect was identifiable prior to installation.

INSTALLATION OF THE SHOWER TRAY WILL BE TREATED AS ACCEPTANCE OF QUALITY.

CHECKING FOR TWISTS

Place the shower tray on a flat level surface.

Using a spirit level, ensure that all outer edges of the shower tray are flat and level as per figure 1.

If any of the levels cannot be corrected when embedding the shower tray, then it may be twisted or distorted. If this is the case, then the shower tray must not be installed and should be returned to the retailer for replacement.

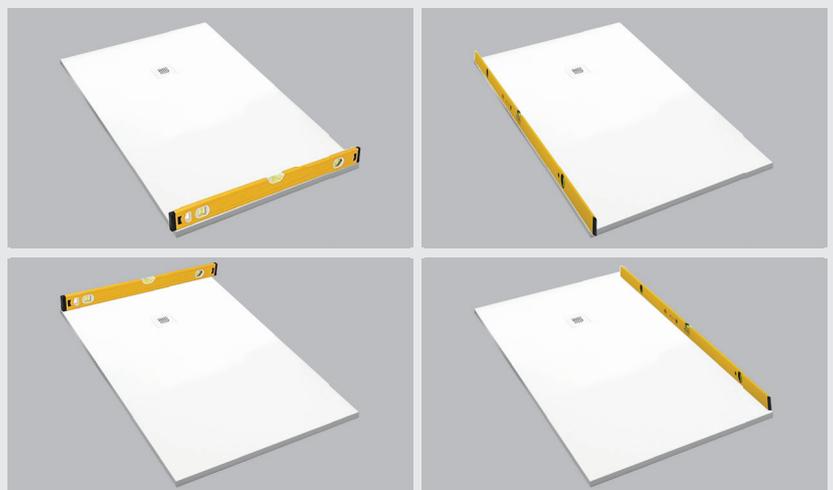


Figure 1

Ibiza Slate Shower Tray Installation Manual

**THIS PRODUCT MUST BE INSTALLED
BY A QUALIFIED PLUMBER**



IMPORTANT - STORE TRAY ON FLAT

INSTALLATION INSTRUCTIONS


Note that this shower tray is suitable for installation on both wooden and concrete floors. If fitting to a wooden floor, it is recommended that the base be made from marine ply as it resists delamination under humid conditions.

1. For the perfect installation of the shower tray, it is necessary to create a completely level surface. Use a 12 or 15mm notched trowel with flexible tile adhesive. Spread the flexible tile adhesive evenly on the floor area as per figure 2.



2. Settle the shower tray into final position and tap level as per figure 3. Allow the flexible tile adhesive to set before applying any further weight to the shower tray.

3. Now that the shower tray is in final position, place the waste cover grid on the tray.

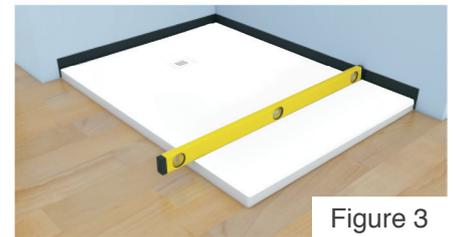

4. Before proceeding any further, the shower tray must be checked for proper drainage with good water volume poured onto all tray areas. If the shower tray fails to drain water suitably, then double check that it is level. If the tray is level and still fails to drain water, then it may be faulty or there may be a blockage in the drainage pipe. In the unlikely event that the tray is faulty, the installation must be halted and the shower tray returned to the supplier for replacement.
Tiles / panelling / shower doors / screens or any other fixtures relating to the shower area must not be fitted if the shower tray has a fault.

CARE INSTRUCTION

- Clean regularly with a PH Neutral Detergent, rinse well with water until there is no residue from detergent & dry.
- To remove any residue simply wipe with a clean cloth and PH Neutral Detergent, rinse well with water.
- Avoid the use of scouring sponges as well as alcohol, acid or abrasive cleaners.

AFTER SALES & TECHNICAL SUPPORT

Our highly experienced after sales and technical support team are always on hand to help should you require technical advice or a spare part.

T: +44 (0)28 3025 9988

E: technical@mylifebathrooms.com